

# MESA<sup>TM</sup>

## SAFE COMPANY

*“Better MESA SAFE than Sorry!”*



## MSL-200 ELECTRONIC LOCK OPERATING INSTRUCTIONS

MESA SAFE COMPANY  
P.O. Box 52282  
Irvine, CA 92619  
Phone: 714-891-8356 Fax: 714-891-8474  
[www.mesasafe.com](http://www.mesasafe.com)  
[sales@mesasafe.com](mailto:sales@mesasafe.com)

**If you have any problems with your safe please contact Mesa Safe technical support:  
(800)-490-5624 or (714) 891-8356**

**THE MASTER CODE IS FACTORY SET TO:** \*\*\*\*\*

## **HOW TO OPEN YOUR SAFE**

### **Single User Mode** (Default Setting)

1. Enter: \* - Code - #
2. The lock will indicate a valid code entry with a double signal and the open light will stay green for five (5) seconds.
3. Turn the handle clockwise before the green light disappears.

### **Dual User Mode** (Please see SETTING SINGLE USER AND DUAL USER MODE )

1. Enter: \* - 1st Code - # - 2nd Code - #
2. The lock will indicate a valid code entry with a double signal and the open light will stay green for five (5) seconds.
3. Turn the handle clockwise before the green light disappears.

### **WRONG TRY PENALTY**

- Entry of three (3) consecutive invalid codes starts a five (5) minute lockout period.
- You will not get any response from the keypad during this period.

## **CHANGING THE MASTER CODE (Code length: 1 - 10 digit code)**

**ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.**

1. Enter: # - Existing Master Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: 1 - \* - New Master Code - # - New Master Code - #, before the orange light disappears.
4. If a mistake is made during the change, wait thirty (30) seconds and repeat steps 1 - 3.
5. Test the new code several times before closing the door.
  - The lock will indicate a valid code change with a double signal.
  - The lock will indicate an invalid code change with a triple signal and the old code is still valid.

## **ACTIVATE THE MANAGER CODE (Code length: 1 - 10 digit code)**

1. Enter: # - Master Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: 2 - \* - New Manager Code - # - New Manager Code - #, before the orange light disappears.
4. If a mistake is made during the activation, wait thirty (30) seconds and repeat steps 1 - 3.
  - The lock will indicate a valid code entry with a double signal.
  - The lock will indicate an invalid code entry with a triple signal and the old code is still valid.

## **CHANGING THE MANAGER CODE**

**ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.**

1. Enter: # - Master Code or Manager Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: 2 - \* - New Manager Code - # - New Manager Code - #, before the orange light disappears.

4. If a mistake is made during the change, wait thirty (30) seconds and repeat steps 1 - 3.
5. Test the new code several times before closing the door.
  - The lock will indicate a valid code change with a double signal.
  - The lock will indicate an invalid code change with a triple signal and the old code is still valid.

### **ACTIVATE USER CODES (Code length: 1 - 10 digit code)**

1. Enter: # - Master Code or Manager Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: (**User #**) - \* - New User Code - # - New User Code - #, before the orange light disappears. (**User #**: Specify which user you would like to activate 3, 4, 5 or 6.)
4. If a mistake is made during the activation, wait thirty (30) seconds and repeat steps 1 - 3.
  - The lock will indicate a valid code entry with a double signal.
  - The lock will indicate an invalid code entry with a triple signal and the old code is still valid.
  - Example: # - Master Code or Manager Code - # - **5** - \* - New User Code - # - New User Code - #, this will activate **User Five (5)**.

### **CHANGING THE USER CODE**

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.

1. Enter: # - User Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: # - New User Code - # - New User Code - #, before the orange light disappears.
4. If a mistake is made during the change, wait thirty (30) seconds and repeat steps 1 - 3.
5. Test the new code several times before closing the door.
  - The lock will indicate a valid code change with a double signal.
  - The lock will indicate an invalid code change with a triple signal and the old code is still valid.
  - **The Master and Manager can also change the user codes by following the ACTIVATE USER CODES section Steps 1 - 3.**

### **DELETING CODES**

#### **Deleting User Code**

1. Enter: # - Master Code or Manager Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: (User #) - \* - # - #.

#### **Deleting Manager Code**

1. Enter: # - Master Code - #
2. The set light will stay orange for ten (10) seconds.
3. Enter: 2 - \* - # - #.
  - The lock will indicate a valid code delete with a double signal.
  - The lock will indicate an invalid code delete with a triple signal and the code is still valid.

### **WARNING**

- Changing the Master Code in single user mode will delete the Manager Code and all User Codes.
- Changing the Master Code in dual user mode will delete the Manager Code and Users 3 & 4.
- Changing the Manager Code in single user mode will delete all the User Codes.
- Changing the Manager Code in dual user mode will delete Users 3 & 4.

## SETTING SINGLE USER AND DUAL USER MODE

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.

### Setting Single User Mode (Any Code to Unlock)

1. Enter: # - Master Code - # - 0 - # - 0 - #
2. The lock will indicate a valid setting change with a double signal.

### Setting Dual User Mode (Any Code & Any Code to Unlock)

1. Enter: # - Master Code - # - 1 - # - 1 - #
2. The lock will indicate a valid setting change with a double signal.

### Setting Dual User Mode (Master or Manager Code & User Code to Unlock)

1. Enter: # - Master Code - # - 2 - # - 2 - #
2. The lock will indicate a valid setting change with a double signal.
  - Please see the HOW TO OPEN YOUR SAFE section for unlocking in dual user mode.

## SETTING TIME DELAY

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.

**THIS FUNCTION WILL DELAY THE OPENING AND PROGRAMMING OF THE SAFE.**

1. Enter: # - Master Code - # - (01-99) - # - (01-99) - #
2. The lock will indicate a valid setting change with a double signal.
  - Example: # - Master Code - # - 05 - # - 05 - #, this will set a five (5) minute time delay.

### Operating The Lock When Time Delay Is Set


1. Press \* or # to initiate the Time Delay.
2. The lock will signal once every ten (10) seconds during time delay and will signal every second during the last ten (10) seconds of the time delay.
3. The lock will signal twice every ten (10) seconds during the open period. (The open period length is two (2) minutes)
4. During the open period you will need to enter your code.

## DE-ACTIVATE TIME DELAY

1. Enter: # - Master Code - # - 00 - # - 00 - #
2. The lock will indicate a valid setting change with a double signal.

## LOW BATTER WARNING

- The green LED light will signal in red when opening your safe.
- The lock is giving you a valid signal but is not unlocking.

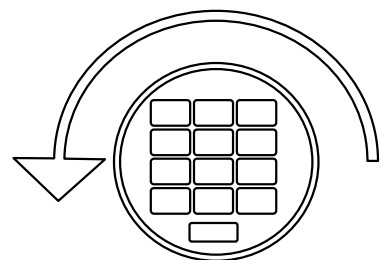

## CHANGING YOUR BATTERIES

1. Turn the keypad housing to the left (counter clockwise) and carefully pull away from the mounting plate to expose battery compartment.
2. Remove the four AAA Alkaline batteries and replace.
  - **CAUTION! Hold onto battery terminal to avoid pulling wires out of housing.**
3. Carefully position the keypad into the inserts on the mounting plate and turn keypad right (clockwise). Ensure that there are no wires or cables trapped between the keypad and the inserts on the mounting plate. Pinched cables result in a short circuit.