

MODEL: MSL-GB9908-B
ELECTRONIC LOCK
OPERATING INSTRUCTION

OPEN LOCK BY USER CODE

{ DEFAULT USER CODE: ***** }

Input correct user code, then press the { OK } button.

The OPEN LOCK light will signal once, then turn the knob to the right.

TO CLOSE THE SAFE

Close the door of the safe, and then turn the knob to the left.

CHANGE THE USER CODE (User code can be 1 to 15 digits)

Input the current user code, then press the { C } button, then input your new code and press { OK }.

IMPORTANT: Test lock operation several times before closing the door.

VALID CODE ENTRY / CHANGE: The OPEN LOCK light will signal once.

INVALID CODE ENTRY / CHANGE: The OPEN LOCK light will signal twice.

OVERRIDE CODE

{ DEFAULT OVERRIDE CODE: ******* }

The override code, when used, will change the user code back to the original default code of 0.

USING THE OVERRIDE CODE

Input correct override code, then press the { OK } button.

The OPEN LOCK light will signal once, and the user code is now set back to the original default code.

CHANGE THE OVERRIDE CODE (override code can be 1 to 15 digits)

Input the current user code, then press the { C } button twice, then input your new code and press { OK }.

VALID CODE ENTRY / CHANGE: The OPEN LOCK light will signal once.

INVALID CODE ENTRY / CHANGE: The OPEN LOCK light will signal twice.

LOW BATTERY WARNING

If the battery is low, the lock will signal three times after the correct user code has been entered.

ALARM FEATURE

If the incorrect code has been entered four consecutive times the alarm will sound.

If the lock is tampered with or struck, the alarm will sound.

TO DISARM THE ALARM, ENTER THE CORRECT USER CODE.